


Operating Instructions

Video Cassette Recorder

NV-SD400 Series

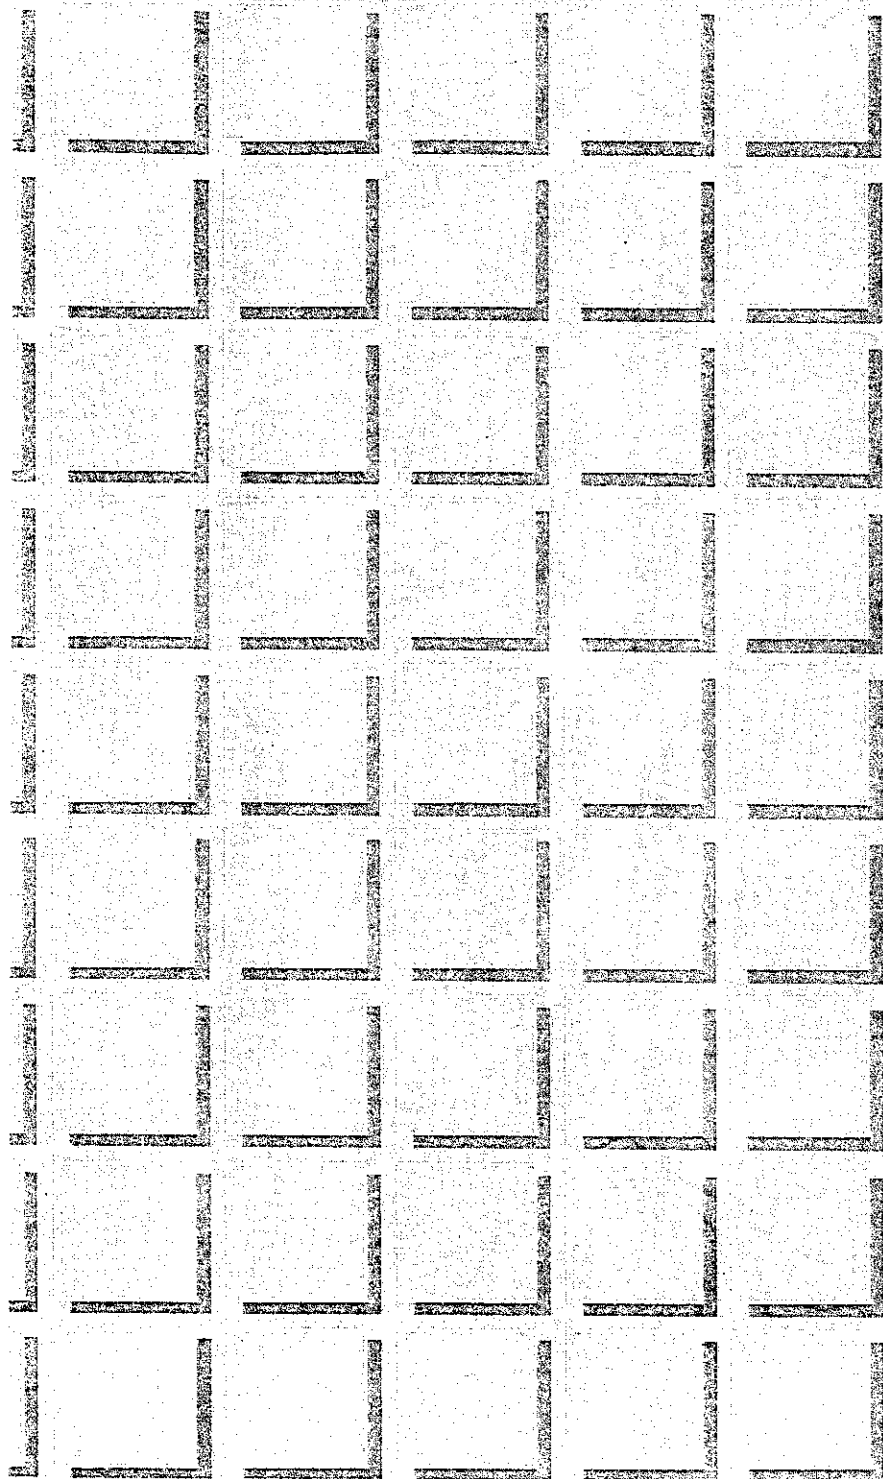

i-CODE



SUPER DRIVE Ai
INTELLIGENT CONTROL SYSTEM

Before attempting to connect, operate or adjust this product,
please read these instructions completely.

Dear Customer

May we take this opportunity to thank you for purchasing this Panasonic Video Cassette Recorder.

We would particularly advise that you carefully study the Operating Instructions before attempting to operate the unit and that you note the listed precautions.

G-Code Programming System


Programming is now easier than ever: simply enter the G-Code number provided in the programme schedule column carried by newspapers and magazines.

- G-Code is a trademark applied for by Gemstar Development Corp. G-Code system is manufactured under licence from Gemstar Development Corporation.

AI Crystal View Control

AI circuit for automatic tape calibration and optimizing of playback characteristics.

During playback the contrast of tapes recorded with good level is automatically optimized.

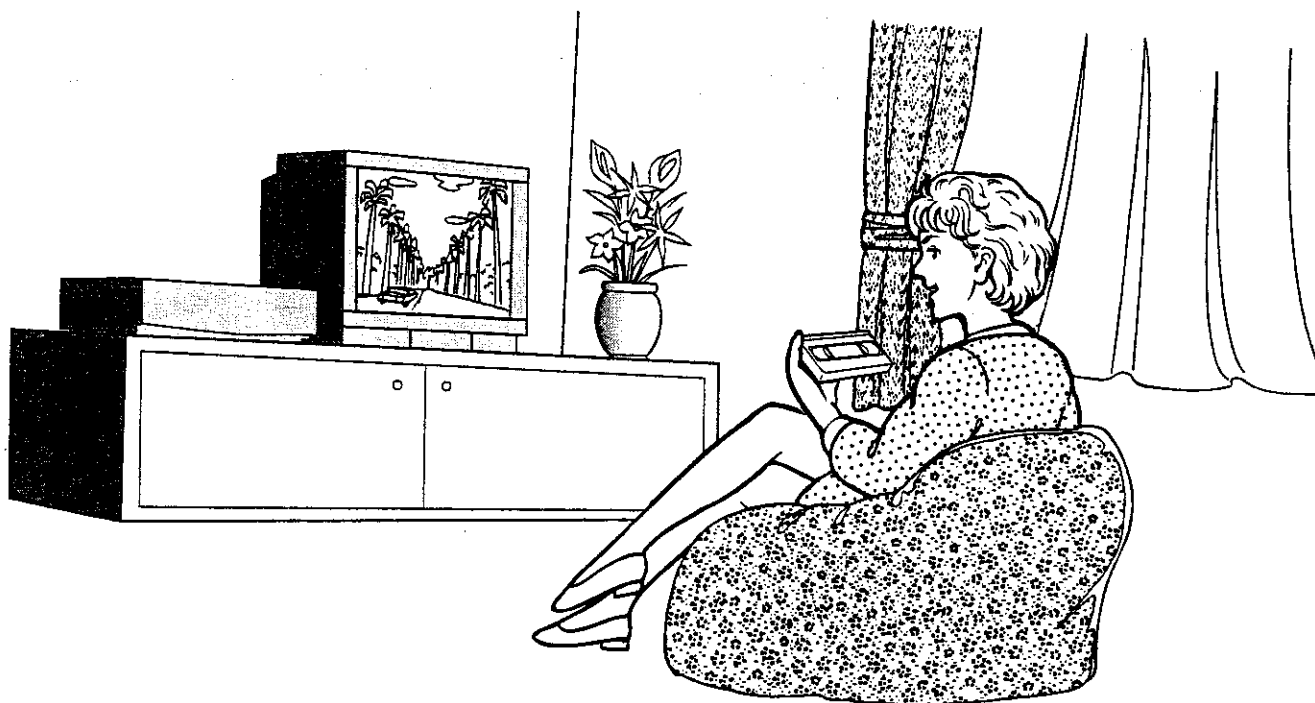

Contents

IMPORTANT

Your attention is drawn to the fact that recording of pre-recorded tapes or discs or other published or broadcast material may infringe copyright laws.

WARNING

TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

NV-SD400A: Australian model

NV-SD400EA: New Zealand model

FOR YOUR SAFETY

■ DO NOT REMOVE OUTER COVER.

To prevent electric shock, do not remove cover. No user serviceable parts inside. Refer servicing to qualified service personnel.

HQ (High Quality) Picture System

Video recorders carrying the HQ symbol mark feature the new VHS High Quality Picture System. This system assures complete compatibility with VTRs that use the conventional VHS system.

Description

Controls and Connection Sockets	4
Infra-red Remote Controller	6
On Screen Display	8

Setting Up

Connections	9
Tuning the TV to your VTR	10
Setting the Remote Controller for Operation of your TV	11
Language Setting of On Screen Display	12
Setting the Clock of the VTR	13
Storing TV Broadcasts into your VTR	14
Preparations for G-Code Programming	16
Settings Using On Screen Display	18

Basic Operations

Playback	20
Manual Recording	22

Advanced Operations


Timer Recording	24
• G-Code Programming	26
Editing	27
• Assembly Editing	27
Other Functions	28

Helpful Hints

Before Requesting Service	29
Precautions	32
Specifications	33

Controls and Connection Sockets

This gives a detailed explanation of the function of each button, switch and connection socket.

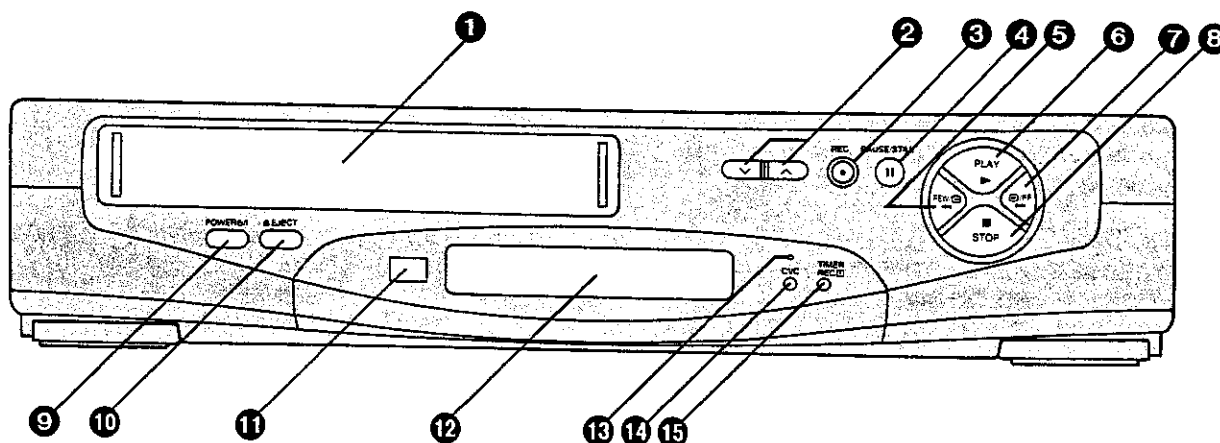

1 Cassette Compartment

Insert a video cassette here.

2 V

To select the required programme position (TV station).

3 REC

To start a recording.

4 PAUSE/STILL

During playback: Still picture.

During recording: To interrupt recording.

5 REW (REWIND)

In the stop mode: To rewind the tape

In the playback mode: To search backward

In the rewind mode: To obtain high speed picture
"◀◀" is lit.

6 PLAY

To start playback. "▶" is lit.

For the repeat playback function.

7 FF (FAST FORWARD)

In the stop mode: To fast forward the tape

In the playback mode: To search forward

In the fast forward mode: To obtain high speed picture
"▶▶" is lit.

8 STOP

To stop any playback or recording.

9 POWER ⏻/⏻

Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still connected to the mains.

10 EJECT

To eject a video cassette.

11 Infra-red Remote Control Receiver Window

12 Display

13 CVC Indicator

When the AI function is on, this indicator lights up.

14 CVC (Crystal View Control)

ON: Using the AI function, playback is performed in the state which achieves optimum picture quality in light of characteristics of a tape. The CVC indicator is lit.

This control should normally be left in the ON position.

OFF: Turn off the AI function.

The CVC indicator is not lit.


With certain tapes, the OFF position may result in a better picture.

15 TIMER REC

To turn the timer recording function on and off.


☐ is lit or not lit.

Once operating timer recording function, the normal VTR operation is not possible unless this button is set to off.

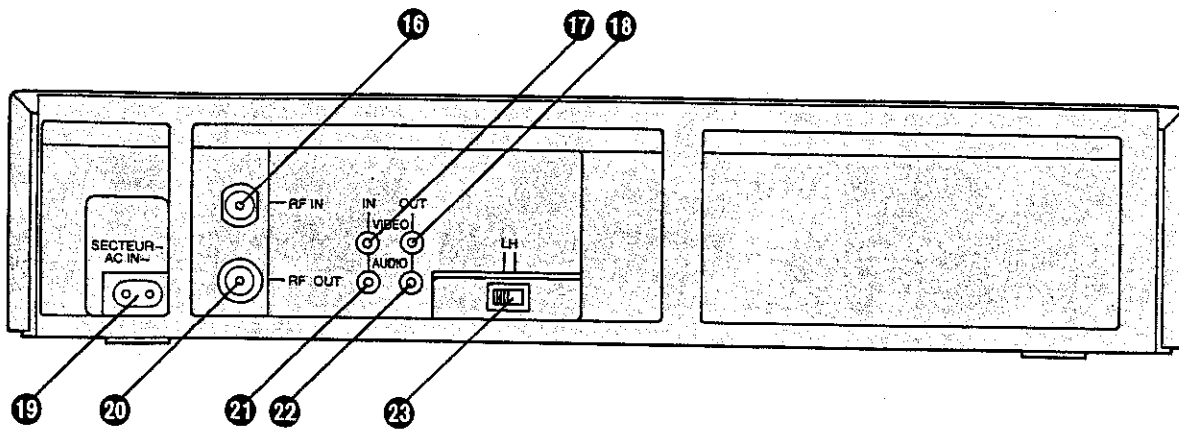

- 16 RF IN**
To connect to the external aerial.
- 17 VIDEO IN**
To connect a video cable to a Movie Camera or another video recorder.
- 18 VIDEO OUT**
To connect a video cable to a TV or another video recorder.
- 19 AC IN~**
To connect to the main power supply.
- 20 RF OUT**
To connect to the aerial terminal on a TV set.
- 21 AUDIO IN**
To connect an audio cable to a Movie Camera or another video recorder.
- 22 AUDIO OUT**
To connect an audio cable to a TV or another video recorder.
- 23 Video Playback Channel Selector**
To select the video playback channel.

Infra-red Remote Controller

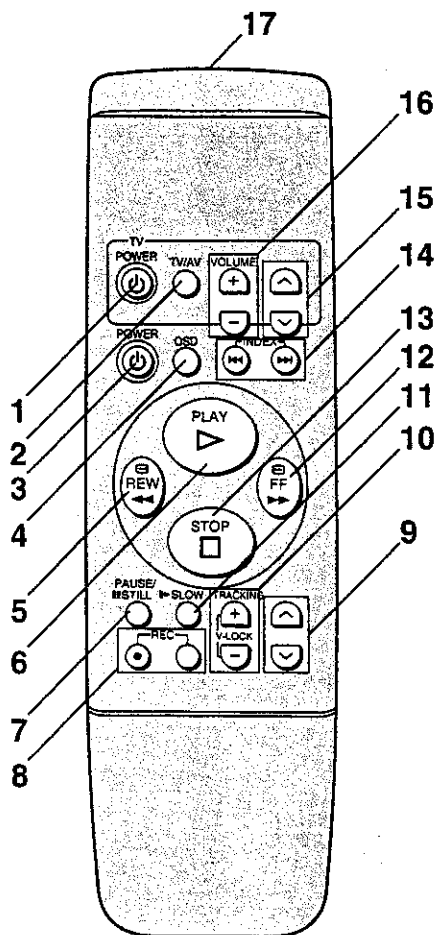

1 POWER (TV)

To switch the TV from on to standby mode or vice versa. In standby mode, the TV is still connected to the mains.

- With some TV models, it may only be possible to switch the TV to standby mode using this button. In this case, use TV/AV or \vee/\wedge (TV) to switch the TV on.

2 TV/AV

To select the TV input.

3 POWER (VTR)

To switch the VTR from on to standby mode or vice versa. In standby mode, the VTR is still connected to the mains.

4 OSD


For the On Screen Display Function.

5 REW (REWIND)

In the stop mode: To rewind the tape
In the playback mode: To search backward
In the rewind mode: To obtain high speed picture
"◀◀" is lit.

6 PLAY

To start playback. "▶" is lit.
For the repeat playback function.

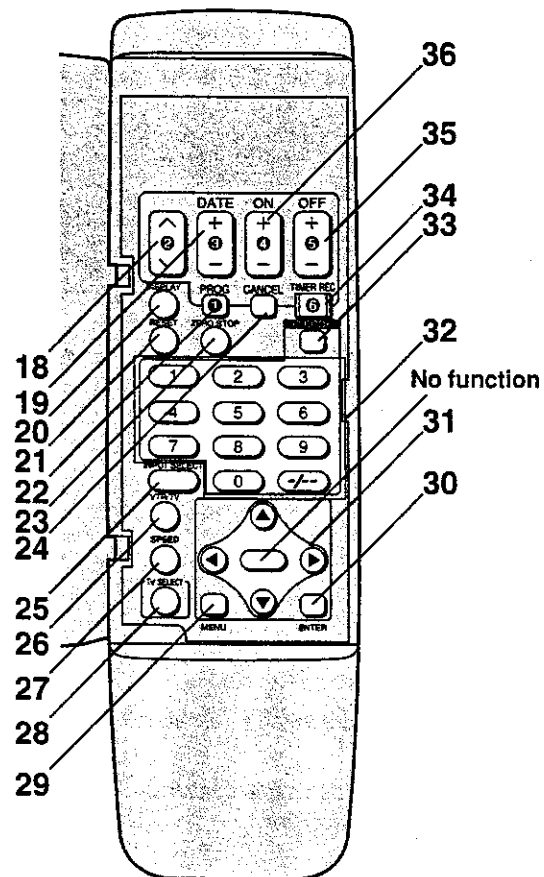

7 PAUSE/STILL

During playback: Still picture.
During recording: To interrupt recording.

8 REC

To start a recording.
• Press both buttons simultaneously.

9 \vee/\wedge (VTR)

To select the required programme position (TV station) of the VTR.

10 TRACKING/V-LOCK

For manual tracking adjustment

The + and - buttons are used to adjust the tracking when, for example, noise bars on the picture are better removed manually than by the automatic digital tracking control. After making a manual adjustment, press both buttons together to return to automatic digital tracking control.

For slow tracking adjustment

When noise bars appear during Still or Slow playback, switch over to slow playback and adjust with the + or - Button to reduce the noise bars.

For vertical locking adjustment

Use the + and - buttons to minimize any vertical jitter during still-picture playback.

11 SLOW

For the slow motion playback function. "◀▶" is lit.

12 FF (FAST FORWARD)

In the stop mode: To fast forward the tape
In the playback mode: To search forward
In the fast forward mode: To obtain high speed picture
"▶▶" is lit.

13 STOP

To stop any playback or recording.

14 INDEX

For the index search function.

15 ∨ ∧ (TV)

To select the required programme position (TV station) of the TV.

16 VOLUME

To adjust the volume of the TV.

17 Infra-red Transmitter

18 ∨ ∧

To programme a timer recording.

19 DATE

To programme a timer recording.

20 DISPLAY

To change the indication on the VTR Display.

→Clock→Counter→Remaining Tape Time →

21 RESET

To reset the tape counter (elapsed time) to "0:00.00".
•The tape counter is automatically reset to "0:00.00" when a video cassette is inserted.

22 PROG

To set and check timer programmes.

23 ZERO STOP

For the zero stop function.

24 CANCEL

To cancel the settings made for a timer recording.

25 INPUT SELECT

To select the "AV" external recording source.

26 VTR/TV

To select the VTR mode or TV mode.

27 SPEED

To select the tape speed desired for recording.
SP gives the best picture quality.
LP gives the longest recording time.

28 TV SELECT

To set the remote controller for operation of the TV.

29 MENU

To make OSD menu appear on the TV screen.

30 ENTER

To make selections from On Screen Display.

31 ▲ ▼ ◀ ▶

To make selections from On Screen Display.

32 Programme Position Selector Buttons

•To select the programme positions (1-99).

9: 9

19: -/- → 1 → 9

•To programme a G-Code number.

33 G-Code

For the G-Code programming.

34 TIMER REC

To turn the timer recording function on and off.

☐ is lit or not lit.

Once operating timer recording function, the normal VTR operation is not possible unless this button is set to off.

35 OFF

To programme a timer recording.

36 ON

To programme a timer recording.



Power Source for the Remote Controller

The remote controller is powered by 2 "AA", "UM3" or "R6" size batteries. The life of the batteries is about one year, although this depends on the frequency of use.

Precautions for Battery Replacement

- Load the new batteries with their polarity (⊕ and ⊖) aligned correctly.
- Do not apply heat to the batteries, or an internal short-circuit may occur.
- If you do not intend to use the remote controller for a long period of time, remove the batteries and store them in a cool and dry place.
- Remove spent batteries immediately and dispose of them.
- Do not use an old and a new battery together, and never use an alkaline battery with a manganese battery.



Installing the Batteries

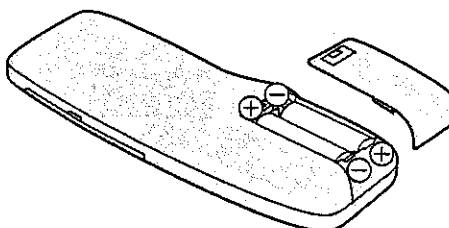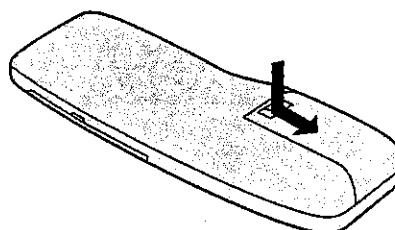

On Screen Display

Press **OSD** to make the On Screen Display appear on the TV screen.

- To make this display disappear, press **OSD** again.

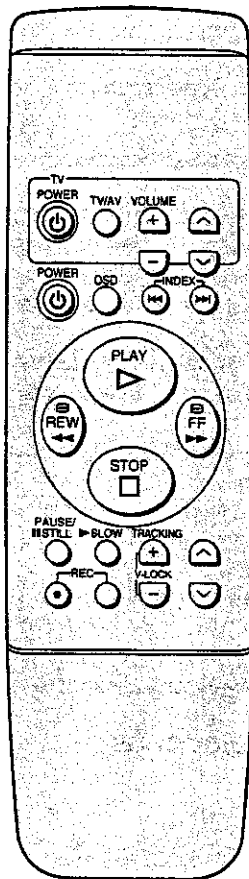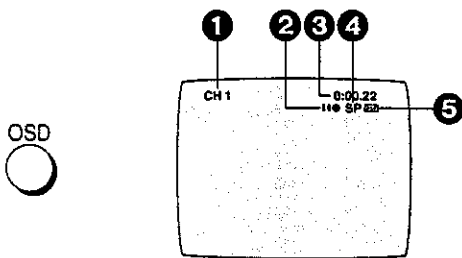

- 1 Programme position
- 2 Tape running display

Stop, Eject	
Rewind, Review	◀◀
Fast Forward, Cue	▶▶
Playback	▶
Still Playback	⏏
Recording	●
Recording Pause	⏏●
Slow Playback	⏏▶

- 3 Present time/Tape counter

Information	Display
Present time	17:24
Tape counter	-2:35.47
Remaining Tape Time	REMAIN 2:34
Dew*	DEW
Index search	S 01

*Only for NV-SD400A.

- 4 Tape speed indicator
- 5 Cassette-in indicator

Note:
On Screen Display may be disturbed or disappear during special playback.


Connections

On Screen Display
Connections


This tells you how to connect with an aerial, TV, etc.

Basic Connections

The following connections are required to record and play back the VTR through TV set:

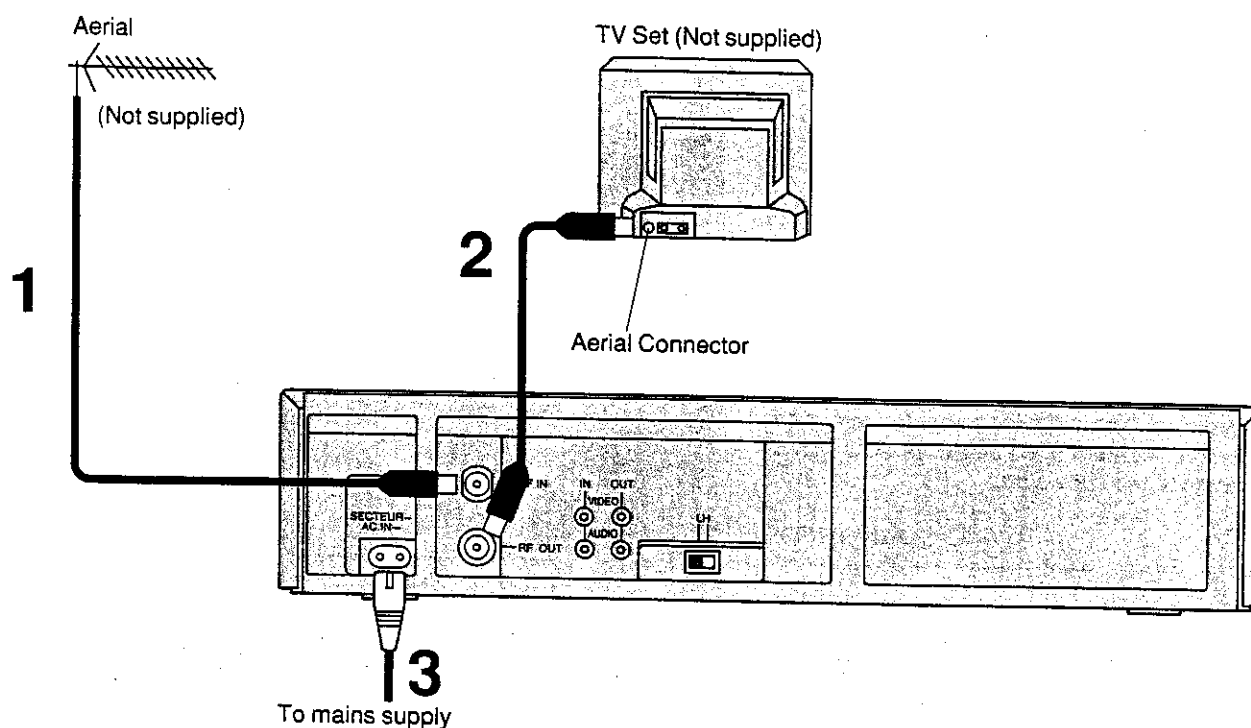


Connection to a TV Set with the Audio/Video Input Sockets

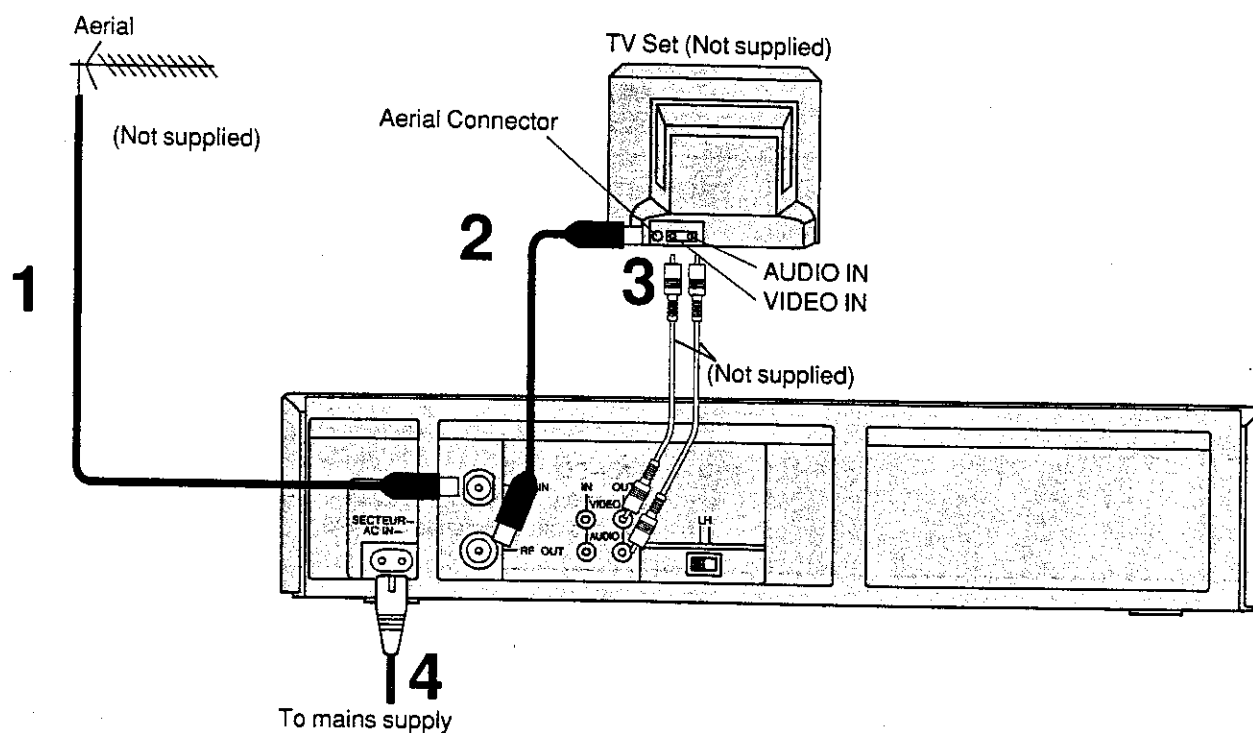

Setting Up

Tuning the TV to your VTR

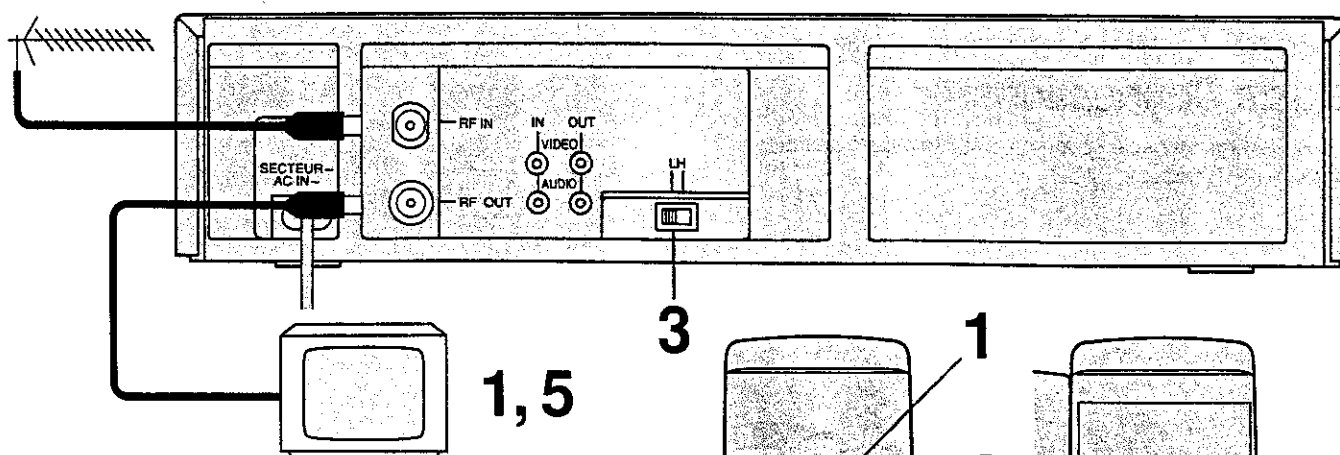

It is possible to view the video picture on your TV in the same way that you watch TV broadcasts.

If you have connected the VTR to the TV through the video and audio input sockets then you do not need to follow the procedure mentioned below. Instead, simply select AV mode on the television.

Operations

Display Symbol

1



Turn on the TV and VTR.

2



Select the VTR mode.

3



Select the video playback channel which is not occupied with any TV station.

NV-SD400A:

H: Channel 1

L: Channel 0

NV-SD400EA:

H: Channel 3

L: Channel 2

4



Insert a **pre-recorded** cassette tape and press **PLAY**.

5

 


Select a programme number on the TV set which you wish to use as the video viewing channel. Then tune in the TV to the picture from the cassette tape currently playing.

NV-SD400A:

In some areas channel 0 may be used by local TV station. In this case switch to channel 1.

6




Stop the playback.

Setting the Remote Controller for Operation of your TV

*Tuning the TV to your VTR
Setting the Remote Controller
for Operation of your TV*

You can operate some manufacturer of TVs (see following table) using the supplied Remote Controller after this setting up.

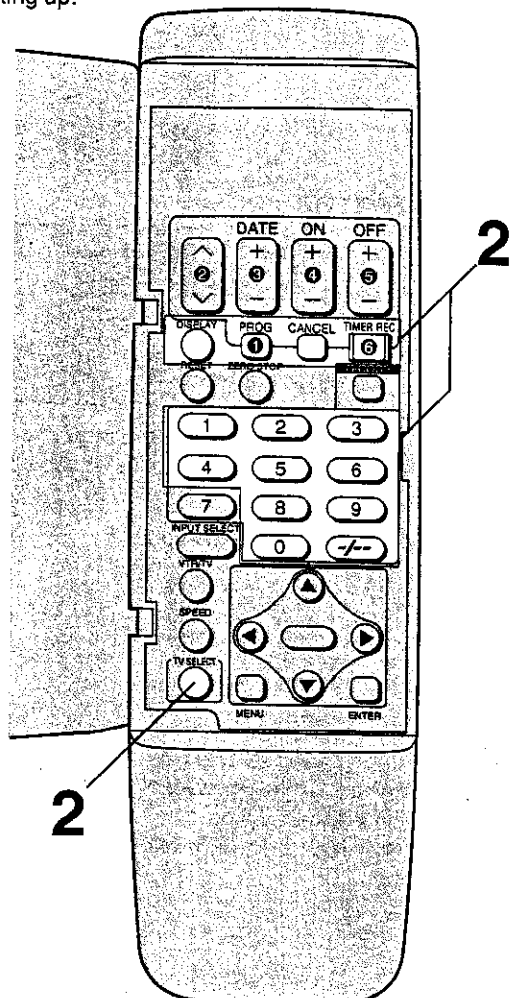

Preparation

Install the batteries in the remote controller. See page 7.

Operations

- 1** Turn on the TV.
- 2** Press corresponding operation button to your TV manufacturer (see following table) while keeping **TV SELECT** pressed.
 - If setting is correct, TV will be turned off automatically.

TV Manufacturer	Operation Button
Panasonic/National	TV SELECT + DISPLAY
	TV SELECT + PROG 1
	TV SELECT + CANCEL
	TV SELECT + TIMER REC 6
SONY	TV SELECT + 1
TOSHIBA	TV SELECT + 2
JVC	TV SELECT + 3
HITACHI	TV SELECT + 4
MITSUBISHI	TV SELECT + 5
	TV SELECT + 6
SHARP	TV SELECT + 8
PHILIPS	TV SELECT + 9
NEC	TV SELECT + 0
SANYO	TV SELECT + -/-

When the TV manufacturer is Panasonic/National or MITSUBISHI:

When the TV's power is turned off in step 2 above, turn it back on and adjust the TV's volume using this remote controller. The volume can be adjusted if the operation button matches the manufacturer of TV.

If it is not possible to adjust the TV's volume, try pressing the other operation button to match the manufacturer of TV again until the volume can be adjusted.


Note:

Some TV models cannot be operated using this remote controller.

Language Setting of On Screen Display

Preparations

- Confirm that the TV is on and the VTR viewing channel is selected.
- Turn on the VTR.
- Press **VTR/TV** to select the VTR mode.

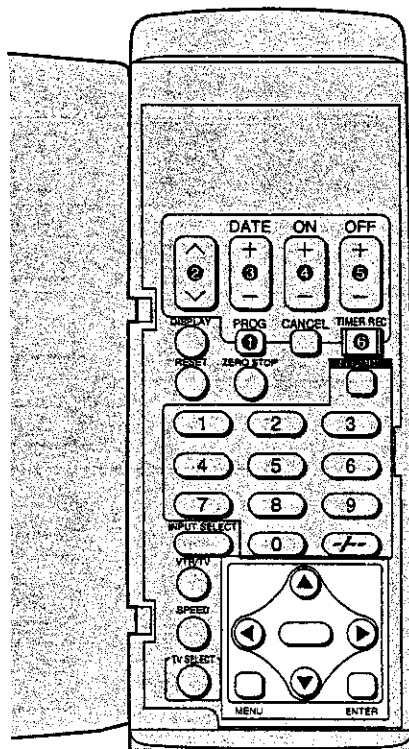


To View a Demonstration

- 1 Press **MENU**.




MENU

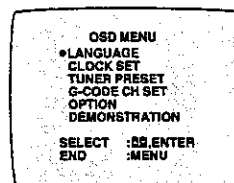

- 2 Select **DEMONSTRATION**.



ENTER

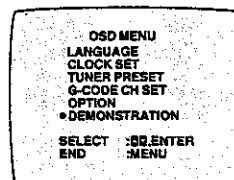

- During Demonstration mode, all the On Screen Displays are displayed one after the other at about five second intervals.

- 3 Press **MENU** to stop the Demonstration.



MENU

Note:

The Menu Screen has a blue background. However, if there is no signal input during AV is selected, the Menu Screen may change to black and white when **MENU** is pressed. This does not indicate a malfunction. If this happens, either input a signal or select other programme position.

To select the Desired Language


Select one of the two languages displayed: English and Russian.

- 1 Press **MENU**.



MENU


On Screen Display

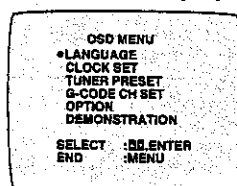


- 2 Select **LANGUAGE**.



ENTER

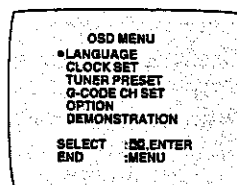

- 3 Select the desired language.

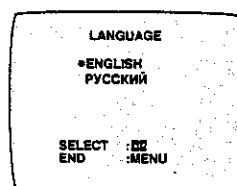

- 4 Press **MENU** twice.



MENU

Setting the Clock of the VTR

Language Setting of
On Screen Display
Setting the Clock of the VTR

The built-in clock is used to activate the timer for automatic recording and must be set to the correct time.

The built-in digital clock employs the 24-hour system.


For Example:

Date; 16th, October, 1999

Time; 20:15

Preparation

- Confirm that the TV is on and the VTR viewing channel is selected.
- Turn on the VTR.
- Press **VTR/TV** to select the VTR mode.

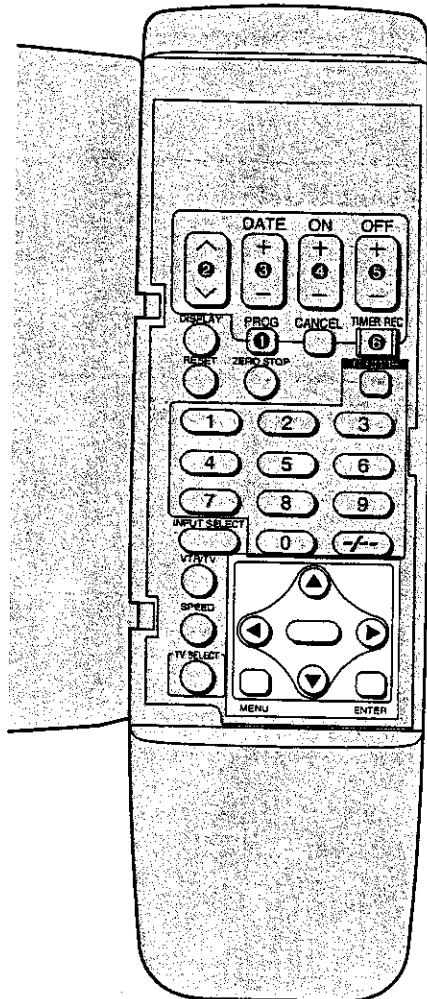


Operations

On Screen Display

1



MENU

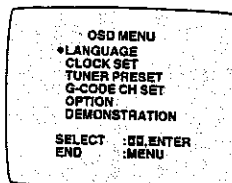


Press **MENU**.

2




ENTER

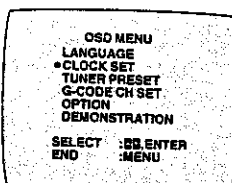


Select **CLOCK SET**.

3


Set each item by pressing **▲** or **▼** and **▶**.

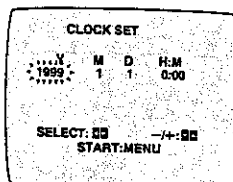


Set Year "1999".

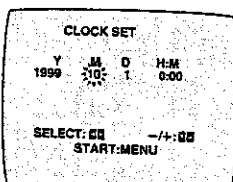

Set Month "10".

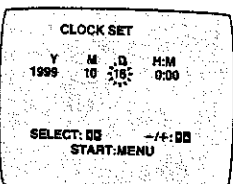

Set Date "16".

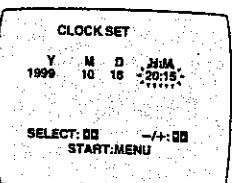

Set Time "20:15".

- When it is kept pressed, the indication changes in 30-minute steps.
- There is no need to press **▶**.

4

Display Symbol



MENU



Press **MENU**.

- The clock will start.

Note:

The clock operates for at least 60 minutes by its backup system in the event of power failure.

Time Reset Function

If the clock is less than two minutes slow or fast, it can easily be reset to the proper time.

For example:

Resetting the clock to 12:00.00.

- 1 Select **CLOCK SET** from OSD menu and press **ENTER**.
- 2 When the current clock display on the VTR is between 11:58 to 12:01, press **MENU** as soon as you hear the 12:00.00 time signal. This resets the time to 12:00.00.

Storing TV Broadcasts into your VTR

Introduction

The VTR is fitted with its own tuner (just like a normal TV set) and can be pre-set to receive up to 99 TV broadcast stations.

Preparations

- Confirm that the TV is on and the VTR viewing channel is selected.
- Turn on the VTR and select the programme position except AV.
- Press **VTR/TV** to select the VTR mode.


PRE-PROGRAMMED TV CHANNELS (NV-SD400A)

The local TV transmission channels 2, 7, 9 and 10 are factory-preset in this VTR. That is, if you can receive television broadcasts on VHF channels 2, 7, 9 and 10, these are already tuned on the programme positions with the matching numbers.

However, it is possible to cancel these presets and tune the local TV broadcast channels on any desired programme positions.

For alternative settings and tuning of additional TV broadcasts channels, follow the Tuning Operations.


Auto Tuning Procedure

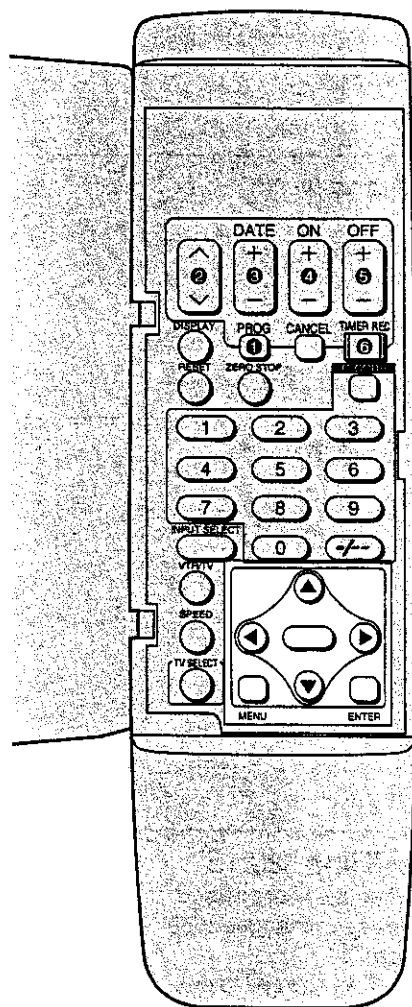

Operations



On Screen Display

1

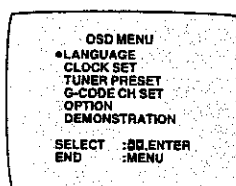



Press **MENU**.

2

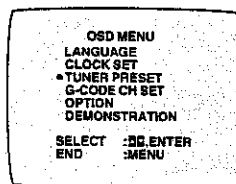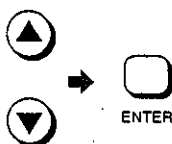


Select **TUNER PRESET**.

3

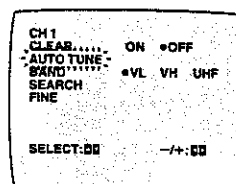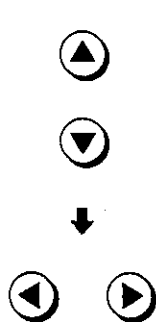

Select **AUTO TUNE** and press **◀** or **▶**.

- When the Auto Tuning finished, On Screen Display disappears and programme position 1 is selected.

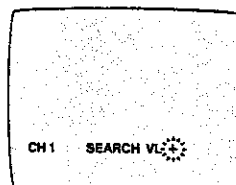


Notes:

- The Auto Tuning is searching for TV station from VHF minimum to UHF maximum and memorizing the data for every programme position. The other programme positions are skipped.
- The Auto Tuning takes seven or more minutes to complete the search.
- If VTR is not correctly tuned by Auto Tuning, follow the procedure on next page.

Manual Tuning Procedure

- 1 Press **MENU**.
- 2 Select **TUNER PRESET** by pressing **▲** or **▼** and **ENTER**.
- 3 Select **CH** by pressing **▲** or **▼** and then select the programme position by pressing **◀** or **▶**.
- 4 Confirm that **CLEAR** is set to **OFF**.
- 5 Select **BAND** by pressing **▲** or **▼** and then select TV band **VL**, **VH** or **UHF** by pressing **◀** or **▶**.
- 6 Select **SEARCH** by pressing **▲** or **▼** and then press **▶**.

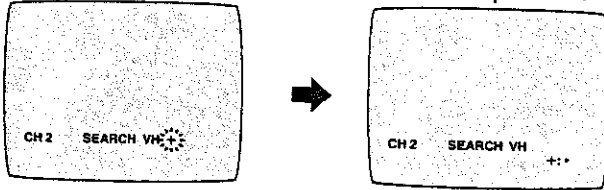

- If the desired TV station is not be tuned, press **▶** again.
- Press **MENU** and repeat steps 3–6 for each programme position you want to tune to a station.

- 7 Press **MENU** three times.

Channel Plan

	VHF		UHF
	VL	VH	
NV-SD400A	0–5	5A–12	21–69
NV-SD400EA	1–3	4–11	21–69


NV-SD400A:

Broadcast TV Channel	Position tuned on VTR
2 ABC	2
7 ATN	7
9 TCN	9
10 TEN	10
28 SBS	28

This table will be required when programming the G-Code.

Fine Tuning Procedure

- 1 Press **MENU**.
- 2 Select **TUNER PRESET** by pressing **▲** or **▼** and **ENTER**.
- 3 Select **CH** by pressing **▲** or **▼** and then select the programme position by pressing **◀** or **▶**.
- 4 Select **FINE** by pressing **▲** or **▼**.
- 5 Press **◀** or **▶** to obtain the best tuning condition.

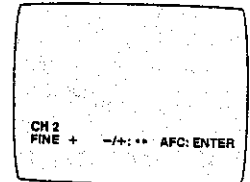

- To return the tuning to its former state, press **ENTER**.

- 6 Press **MENU**.

Blanking of Unoccupied Programme positions

- 1 Press **MENU**.
- 2 Select **TUNER PRESET** by pressing **▲** or **▼** and **ENTER**.
- 3 Select **CH** by pressing **▲** or **▼** and then select the programme position by pressing **◀** or **▶**.
- 4 Select **CLEAR** by pressing **▲** or **▼**.
- 5 Select **ON** by pressing **◀** or **▶**.
 - Repeat steps 3–5 for another unoccupied programme positions to skip during the selection of the programme positions.
 - To cancel the blanking of a programme position, select that programme position and then select **CLEAR OFF**.

- 6 Press **MENU** twice.


Preparations for G-Code Programming

Identification numbers must be set for G-Code programming. Simply proceed with the G-Code programming operation described on page 26, and the identification numbers of the TV stations concerned will be set automatically. This means that G-Code programming is possible even without performing the operation described on this page. However, you can follow the setting procedure described below if you wish to set the identification numbers of all the TV stations prior to actual programming.

"Identification numbers" refer to the numbers used for identifying the TV stations. The programme positions on the VTR receiving the TV stations are set in these identification numbers. Have a newspaper or magazine on hand which lists today's local TV station programmes and G-Code numbers.

Preparations


- Set the clock of the VTR. See page 13.
- Store TV broadcasts into your VTR. See pages 14 and 15.
- Confirm that the TV is on and the VTR viewing channel is selected.
- Turn on the VTR.
- Press VTR/TV to select the VTR mode.

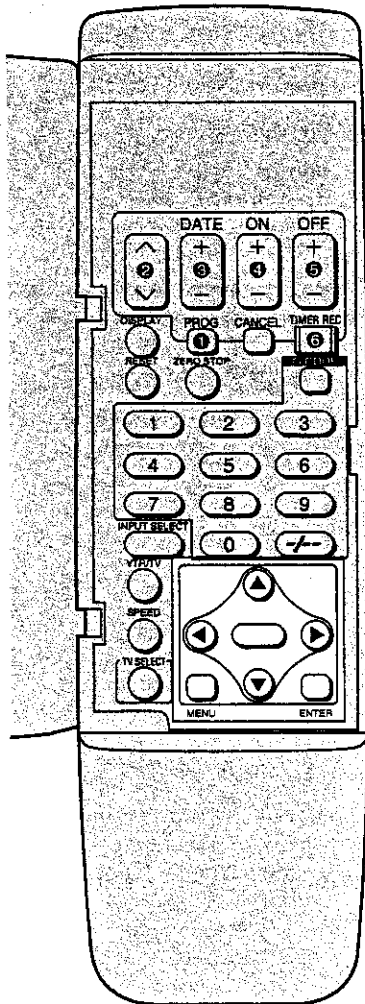



Operations

On Screen Display


1 Press MENU.

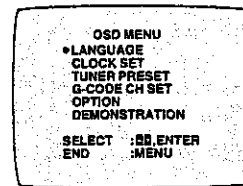


2 Select G-CODE CH SET.

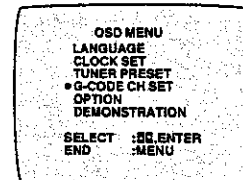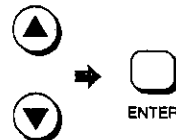

3 Select the identification number (001-255).

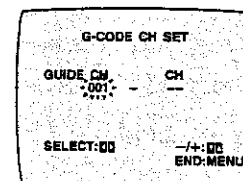

4 Press ◀ or ▶ and then select the programme position (1-99, AV).

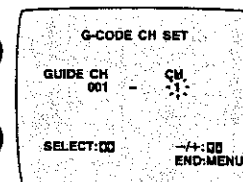

- To set the other TV stations, press ◀ or ▶ and then repeat steps 3 and 4.

5 Press MENU twice.



Note:

To receive satellite stations, the satellite receiver must be connected to the VTR and programme position must be set depending on the type of the connection mode.

AV: When the satellite receiver is connected to the Audio/Video input sockets.

- When the satellite receiver is connected by means of the RF coaxial cable, set to a free programme position between 1 and 99.

For Example:
(NV-SD400A)

TV Station	Programme Position on VTR	Identification Number
ABC	2	002
ATN	7	007
TCN	9	009
TEN	10	010
SBS	28	028/001

For Example:
(NV-SD400EA)

TV Station	Programme Position on VTR	Identification Number
TV ONE	1	001
CHANNEL 2	2	002
TV3	3	003
SKY TV MOVIES	4	004
SKY TV SPORTS	5	005
SKY TV NEWS	6	006
CTV	7	007
ACTION TV	8	008

To be CH 5

Settings Using On Screen Display

Preparations

- Confirm that the TV is on and the VTR viewing channel is selected.
- Turn on the VTR.
- Press **VTR/TV** to select the VTR mode.

To select the corresponding Cassette Tape Length for displaying the approximate remaining tape time

1 Press **MENU**.




MENU

2 Select OPTION.




ENTER


On Screen Display

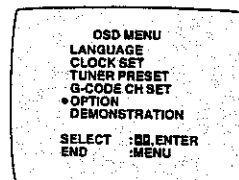

3 Select TAPE SELECT.

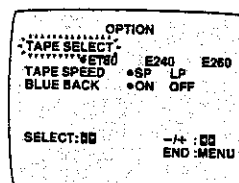


4 Select the corresponding cassette tape length.

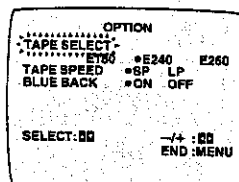

E180: For E30, -60, -90, -120, -150 and -180 tapes


E240: For E240 tape

E260: For E260 and -300 tapes

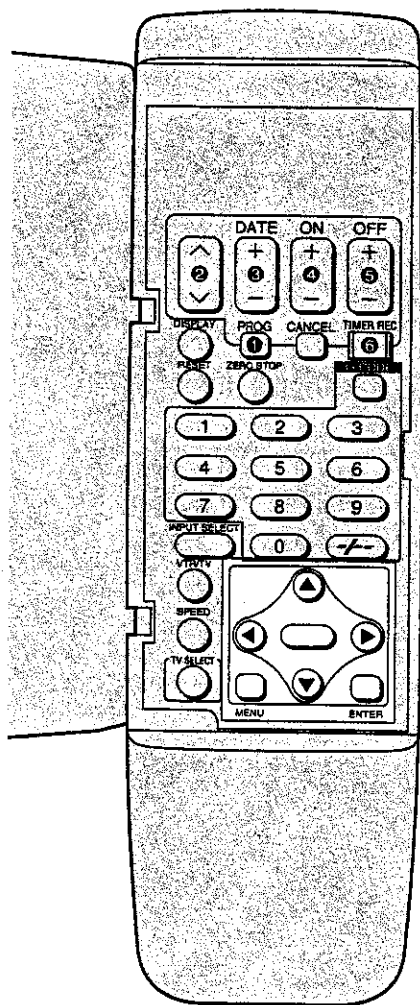


To select the Desired Tape Speed for the manual recording

1 Select TAPE SPEED.

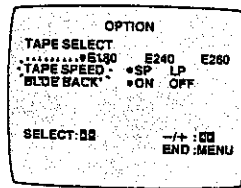


2 Select the desired tape speed.

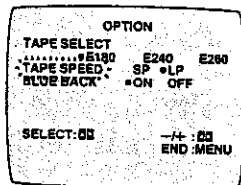


For Blue Background Function

When **BLUE BACK** is ON, the screen will always have a blue background when no signal is received or the received signal is very weak.

1 Select BLUE BACK.

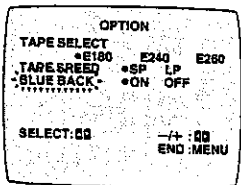

2 Select ON.

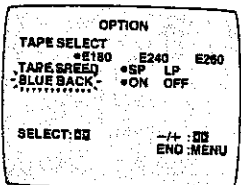

- When **BLUE BACK** is OFF, the blue background function does not work.
- It is not possible to record the blue picture of the blue background function.


After All Settings are selected

Press **MENU** twice to make On Screen Display disappear.



MENU

Playback

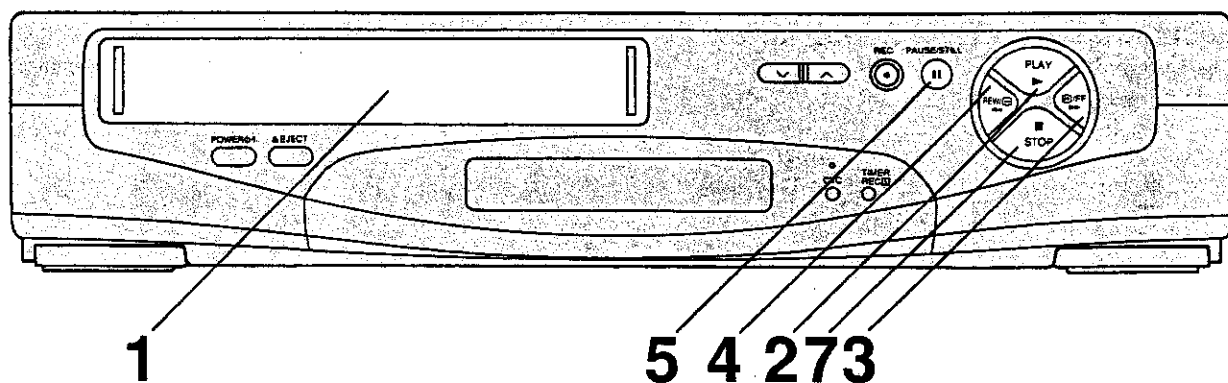

Operations

 
Display Symbols

1




Insert a recorded cassette tape.

2




Start viewing the picture.

 3



Search forward by tapping **FF**.
•To change back to normal playback, press **PLAY**.

 4




Search backward by tapping **REW**.
•To change back to normal playback, press **PLAY**.

5




View a still picture.
•To continue the normal playback, press **PLAY** or **PAUSE/STILL**.

 6




View the slow motion picture.
•To continue the normal playback, press **PLAY**.

 7




Stop viewing the picture.

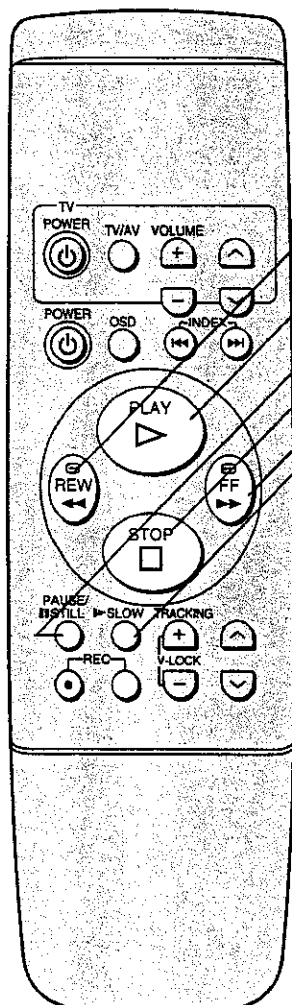

Other Playback Functions


To obtain High Speed Picture During Fast Forward or Rewind

Keep **FF** pressed during fast forward.
Keep **REW** pressed during rewind.

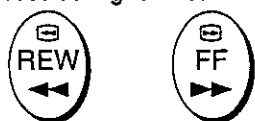

To playback the Recorded Part Repeatedly

Keep **PLAY** pressed for more than 5 seconds.

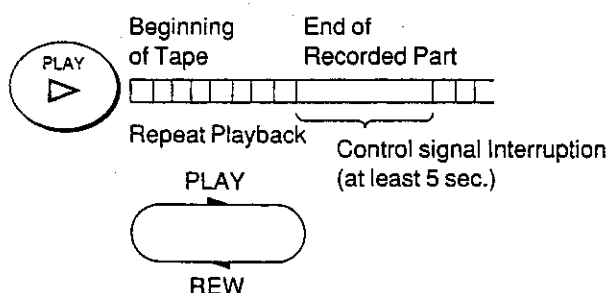

- Press **STOP** to release from Repeat Playback mode.

To return to a Specified Scene

- 1 Press **RESET** to set the counter to 0:00.00.



- 2 After playback, press **ZERO STOP** in the stop mode.

- The tape will be rewound or fast forwarded to 0:00.00.



To find the Beginning of Each Recording

For example:

Searching for the 2nd recorded segment in the forward direction.

Press **INDEX** \ggg twice.



- After finding the specific recorded segment, playback starts automatically.
- For the reverse direction, press **INDEX** \lll .
- Up to 20 index signals can be searched for in both directions.
- When the opposite **INDEX** button is pressed, the number shall be decreased till 1.
- The figure on the display is decremented by 1 each time an index signal is located.

Recording Index Signals



Index signals are recorded in following cases.

- When a recording is started by pressing **REC**.
- When **REC** is pressed during recording.
- When timer recording is activated.

Notes:





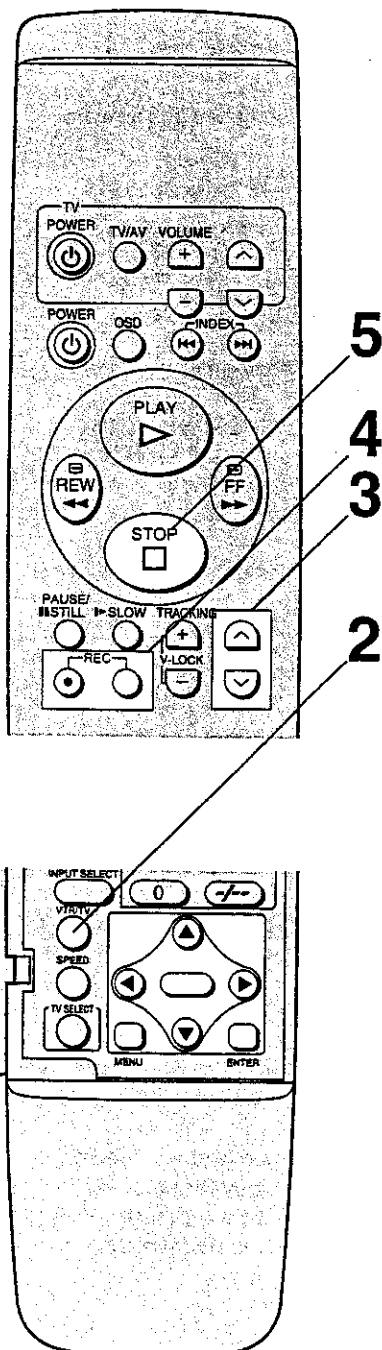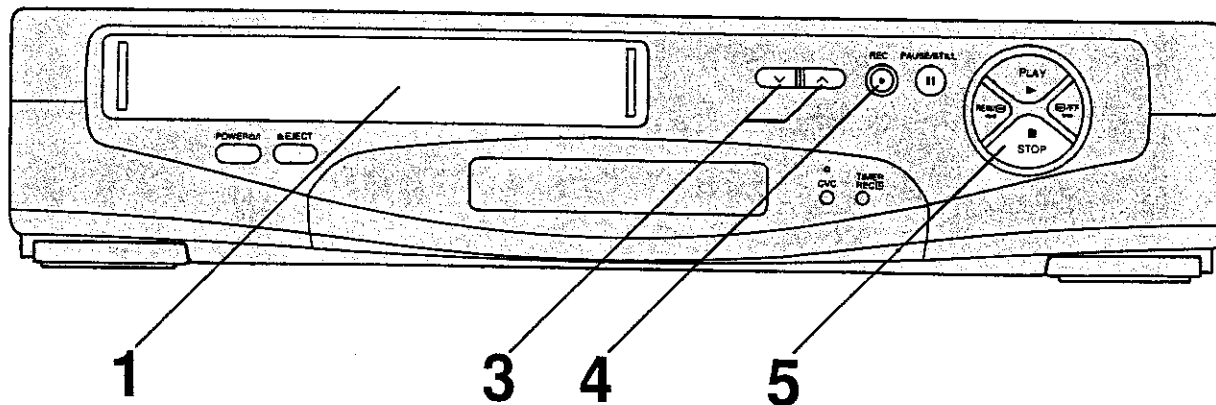




- Cue, review or slow playback will be automatically released after 10 minutes, and still playback after 5 minutes.
- The **INDEX** search function can only work correctly, if the index signals are spaced at least 3 minutes apart in the SP mode and 5 minutes apart in the LP mode.
- In LP mode only:
 1. During any playback mode other than normal playback, the picture may have some noise bars, the colour may be unstable, or a black and white picture may appear.
 2. When playing back a tape which was recorded on another VTR, it may be necessary to adjust the Tracking Control. In some cases the picture quality may still be inferior. This is due to limitation of format.

Manual Recording



Operations

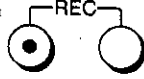Display Symbols

- 1**   Insert a cassette tape.
• If it has already been inserted, press **POWER** to turn the VTR on.
- 2**   Select the VTR mode.
- 3**   Select TV station.
- 4**   Start recording.
- 5**  Stop recording.

To select the Desired Tape SpeedPress **SPEED** before recording.**To interrupt Recording**Press **PAUSE/STILL** during recording.


Press again to continue recording.

**To record One TV Programme while Viewing Another Programme**

- 1 Refer to the manual recording operations steps 1 to 4.
- 2 Press **VTR/TV** to select the TV mode.
- 3 Select the TV programme on your TV set you wish to view at the present time.

To display the Approximate Remaining Tape Time

- 1 Select **TAPE SELECT** on **OPTION** on screen display and select the corresponding cassette tape length. See page 18.

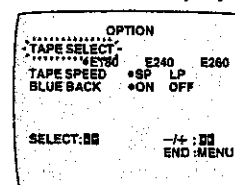On Screen Display

- E180: For E30, -60, -90, -120, -150 and -180 tapes
- E240: For E240 tape
- E260: For E260 and -300 tapes

- 2 Press **DISPLAY**.



→Clock→Counter→Remaining Tape Time→

- The remaining tape time may not be displayed correctly depending on the tape used.

Notes:

- When a video cassette with a broken off tab is inserted, the "00" indication will flash to indicate that recording is not possible.
- The recording pause mode will be automatically released after 5 minutes. Revert back to the stop mode.

Timer Recording


Up to 8 timer programmes can be recorded up to one month in advance by setting the timer, including weekly and daily programmes.

Preparations

- Insert a cassette tape with an intact erasure prevention tab.
- Confirm that the TV is on and the VTR viewing channel is selected.
- Turn on the VTR.
- Press **VTR/TV** to select the VTR mode.

For Example:

Timer programme number; 1
 Programme position (channel); 2
 Date; 27th, October
 Starting time; 20:02
 Ending time; 21:30
 (Present date; 16th, October)

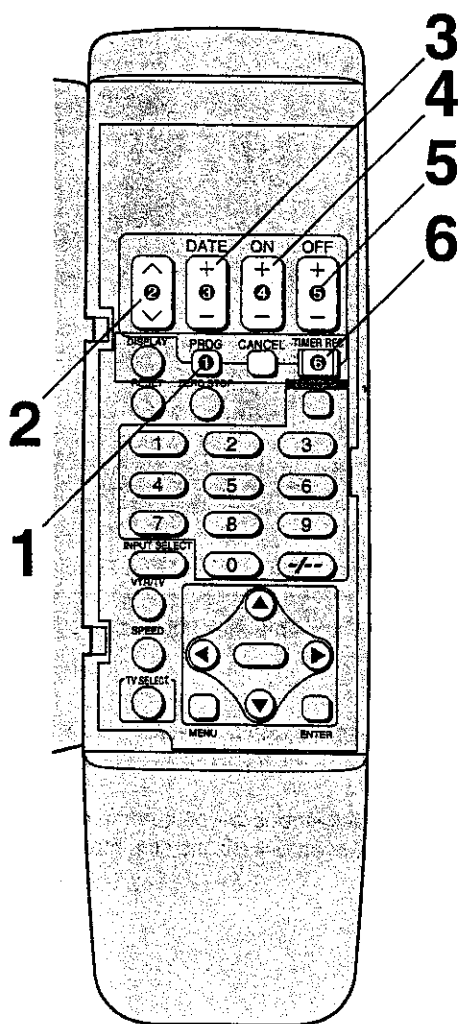

Operations


On Screen Display

1 Select Timer Programme number "1".



CH	DATE	ON	OFF	SP
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				
SELECT	00		--:00	

 2 Set Programme position (channel) "2".




CH	DATE	ON	OFF	SP
2				
3				
4				
5				
6				
7				
8				
9				
10				
SELECT	00		--:00	

3 Set Date "27".



CH	DATE	ON	OFF	SP
2	27WE			
3				
4				
5				
6				
7				
8				
9				
10				
SELECT	00		--:00	

 4 Set Starting time "20:02".



CH	DATE	ON	OFF	SP
2	27WE	20:02		
3				
4				
5				
6				
7				
8				
9				
10				
SELECT	00		--:00	

- When it is kept pressed, the indication changes in 30-minute steps.

5 Set Ending time "21:30".




CH	DATE	ON	OFF	SP
2	27WE	20:02	21:30	
3				
4				
5				
6				
7				
8				
9				
10				
SELECT	00		--:00	

6 To activate timer recording, press **TIMER REC**.



Weekly Timer Recording

In step 3, select the desired day by pressing **DATE** —. For example, SU (Sunday)

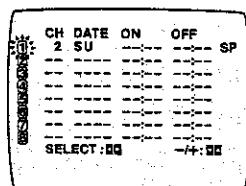


Daily Timer Recording

For this timer function, several groups of days can be selected.


- (A) Daily recording from Monday to Friday
 (B) Daily recording from Monday to Saturday
 (C) Daily recording from Sunday to Saturday

In step 3, select the desired days by pressing **DATE** —. For example, (C)

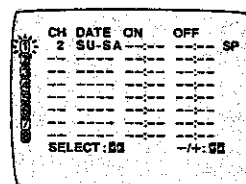



Timer Recording from External Signal Source

If Timer Recording is performed by a unit connected to the Audio/Video input sockets, select the AV indicator in step 2 for the programme position.

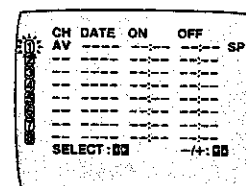

Selecting the Desired Tape Speed

Press **◀** and then select the desired tape speed by pressing **▲** or **▼** in any of steps 2–5.

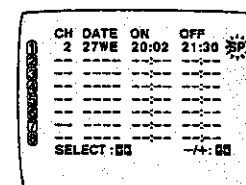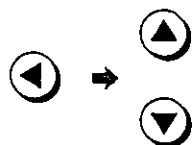

Setting other Programmes in succession

Repeat steps 1–5.


Checking a Timer Programme

- The VTR must be turned on, or the timer recording indicator "□" is lit.
- Confirm that the TV is on and the VTR viewing channel is selected.

1 Press **PROG**.



2 Press VTR/TV to select the VTR mode.

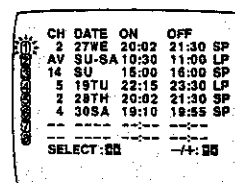

Cancelling a Timer Programme

- The VTR must be turned on, or the timer recording indicator "⏺" is lit.
- Confirm that the TV is on and the VTR viewing channel is selected.

1 Press **PROG**.






2 Press **VTR/TV** to select the VTR mode.



3 Press **PROG** repeatedly until the desired timer programme number is flashed on and off.



4 Press CANCEL.

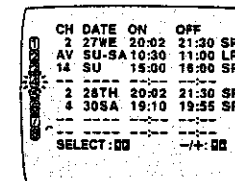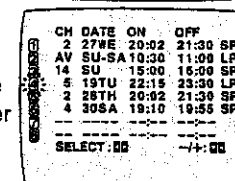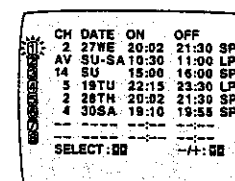

Note:

If a timer recording is not performed to the end (due to insufficient tape or cancellation by the user), the programmed timer recording data will be cancelled from the memory by 4 a.m. two days later.


However, if the Timer Record Function is activated at that time, the programmed timer recording data will be cancelled at 4 a.m. the next day.

G-Code Programming

Programming is now easier than ever: simply enter the G-Code number provided in the programme schedule column carried by newspapers and magazines. G-Code numbers are numbers which are assigned to each programme listed in the TV programme schedule carried in newspapers and TV guides. When these numbers are entered, the numbers are converted into the actual programming.

Preparations


- Insert a cassette tape with an intact erasure prevention tab.
- Confirm that the TV is on and the VTR viewing channel is selected.
- Turn on the VTR.
- Press **VTR/TV** to select the VTR mode.

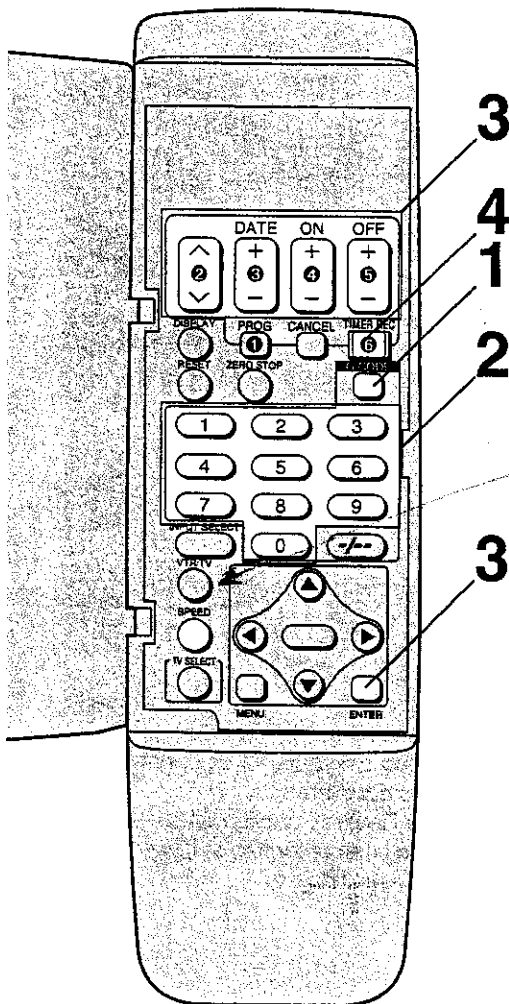


Operations

On Screen Display

1 Press G-CODE.

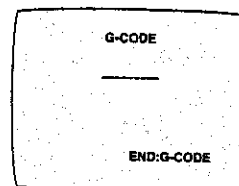


2 Enter a G-Code number. Example: 123456

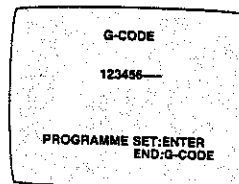


- If you have entered the wrong number, press **CANCEL** and then enter the proper number.

3 Press ENTER.

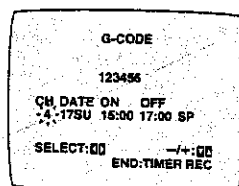

- Confirm that the number corresponds to the right programme. If the display looks like this:

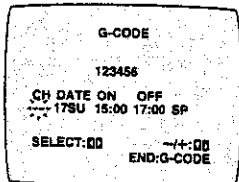

select the programme position of your VTR which receives the TV station you entered at step 2 using button **2** and then press **ENTER**.

- To make any corrections, use buttons **3-5** as the same way on page 24.

4 Press TIMER REC.



Notes:

- To select the desired tape speed, press **SPEED** before programming.
- When the G-Code number is used for programming, the recording time may be slightly longer than the actual programme time.
- Repeat steps 2 and 3 if "PROGRAMME IS INCOMPLETE." appears.
- When programming two or more programmes, repeat steps 1-3 before pressing **TIMER REC**.
- The procedures for checking and cancelling a timer programme are the same as on page 25.

Assembly Editing



This function can be used to make up an edited tape from other recordings or video sources.

A new scene can be added to the end of a previous one.

Preparations

- Connect a movie camera or another VTR to this VTR as shown.
- Insert a recorded cassette tape with an intact erasure prevention tab.
- Select the video source required by pressing **INPUT SELECT** to set AV.

← VTR position

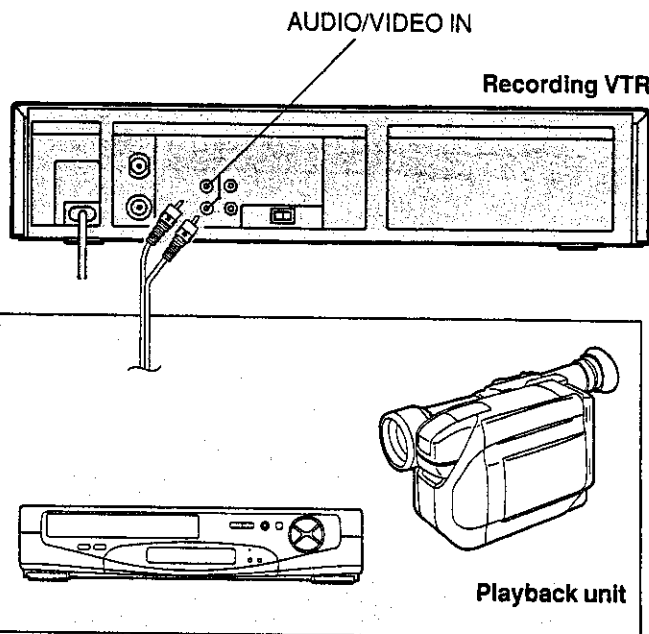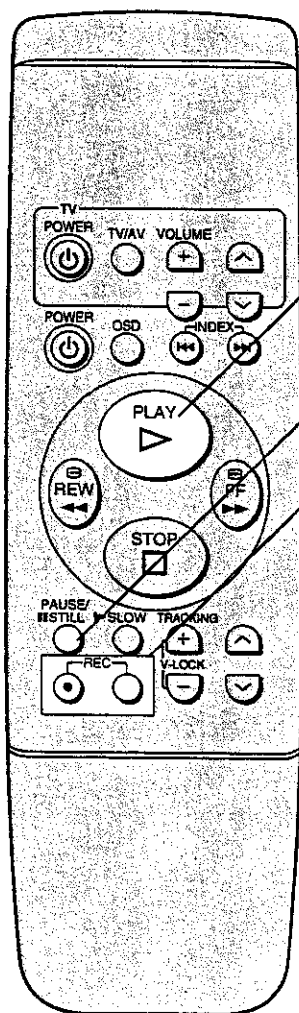

Operations

- 1 Search for the end of the previous recording.



- 2 Press **PAUSE/STILL**.




- 3 Press **REC** to switch the VTR from the pause mode to the recording standby mode.



- 4 Start the new recording by pressing **PAUSE/STILL** again.



Other Functions

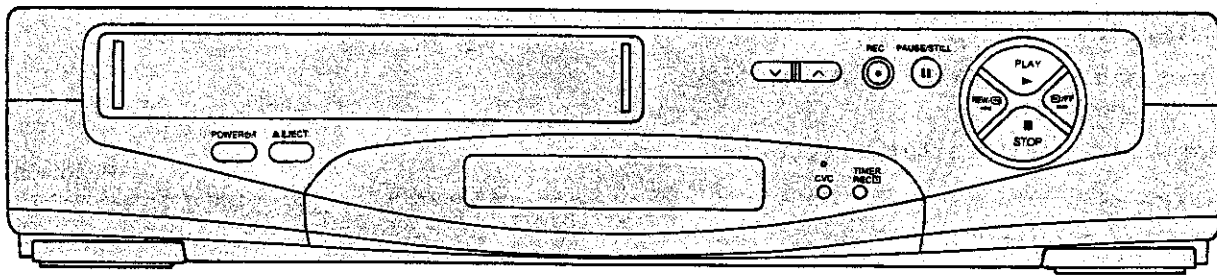

Other Automatic Functions

Automatic playback

When a cassette without an erasure prevention tab is inserted, the VTR starts playback automatically.

VTR-off playback

When the VTR is off, an inserted cassette can be played back by pressing **PLAY**.

Automatic rewinding

When the tape reaches its end during recording (except for timer recording) or playback, it will automatically be rewound to the beginning.


Automatic switching off and ejection

When the VTR is switched off, an inserted cassette can be ejected simply by pressing **EJECT**. The VTR will eject the cassette and automatically turn itself off again.

Before Requesting Service

Other Functions
Before Requesting Service

Before requesting service, check the following points once again.

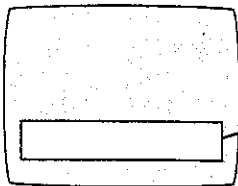Message of On Screen Display		
 <p>Message of On Screen Display is displayed.</p>		
MESSAGE	CAUSE	REMEDY
PLEASE PUT IN A VIDEO CASSETTE.	REC is pressed without cassette.	Put in a video cassette.
PLEASE STOP THE TAPE.	TUNER PRESET is selected during playback.	Stop the tape.
PLEASE SET THE CLOCK.	PROG is pressed when the clock is not set.	Set the clock.
PLEASE USE A CASSETTE WITH TAB.	REC is pressed without tab of Cassette.	Use a cassette with tab.
NO TIMER RECORDING HAS BEEN SET.	TIMER REC is pressed with no timer programmes.	Set timer recording.
TIMER PROGRAMMES ARE FULL.	G-CODE is pressed when 8 programmes have been already set.	Cancel unnecessary programme.
VTR IS IN THE TIMER STANDBY MODE.	POWER is pressed during timer standby mode.	Press TIMER REC to release from timer standby mode.
DEW FORMED IN THE VTR.*	Dew forms.	Wait until the message disappears.

*Only for NV-SD400A.

Self Test Indication		
<p>This VTR has a self-diagnosis and display function. If the VTR detects trouble during installation or during use, the following indications automatically appear in the VTR display. Indications are displayed in the form of a single English letter plus two numbers such as [H01].</p>		
INDICATION	CAUSE	REMEDY
U 1 0*	Dew forms.	Wait until the indication disappears.
H □ □	Some trouble has occurred. (Numbers following H and F differ according to the status of the VTR.)	Consult your dealer for further advice. <i>ASC.</i>
F □ □		

*Only for NV-SD400A.

Helpful Hints

VTR will not operate correctly

SYMPTOM	CAUSE	REMEDY	CHECKED
VTR display is not illuminated.	Mains lead is not connected.	Reconnect mains lead to VTR.	
VTR display is illuminated but VTR will not operate.	VTR is in timer mode.	Press TIMER REC to operate VTR manually.	
	Safety devices are operating.	Disconnect mains lead and wait for 1 minute. Reconnect mains supply and check functions.	
	Condensation may have formed.	Do not operate VTR for 1 hour.	
A language which you do not understand appears on the TV screen.	The Language Setting is set to a language which you do not understand.	Select the desired language. See page 12.	

Playback will not operate correctly

SYMPTOM	CAUSE	REMEDY	CHECKED
Picture noisy or not in colour. Horizontal bars or lines run down the screen.	Tracking is not correct.	Adjust the tracking. See page 6.	
	Video heads are clogged or worn.	Consult your dealer for further advice.	

Precautions

Please read these cautions before you operate this VTR.

Avoid Sudden Changes in Temperature

If the VTR is suddenly moved from a cold place to a warm place, condensation may form on the tape and inside the VTR.

Humidity and Dust

Avoid places where there is high humidity or much dust, which may cause damage to internal parts.

Do Not Obstruct the Ventilation Holes

The ventilation holes prevent abnormal increase in temperature. Do not block or cover these holes. Especially avoid covering the holes with soft materials such as cloth or paper.

Keep away from High Temperature

Keep the VTR away from extreme direct heat such as direct sunlight, heating radiators, or closed automobiles.

Keep Magnets away

Never bring a magnet or magnetized object near the VTR because it will adversely affect the performance of the VTR.

No Fingers or Other Objects Inside

Touching internal parts of this VTR is dangerous, and may cause serious damage to the VTR. Do not attempt to disassemble the VTR. There are no user serviceable parts inside.

Keep Water away

Keep the VTR away from flower vases, tubs, sinks, etc. CAUTION: If liquids are spilled into the VTR, serious damage could occur. If you spill any liquid into the VTR, consult qualified service personnel.

Lightning

To avoid damage by lightning, disconnect the aerial plug from the VTR.

Cleaning the VTR

Wipe the VTR with a clean, dry cloth. Never use cleaning fluid, or other chemicals. And do not use compressed air to remove dust.

Stacking

Place the VTR in a horizontal position, and do not place anything heavy on it.

Video Head Clogging

The video heads place picture signals on the tape during recording and read picture signals from the tape during playback and they are, therefore, of critical importance for the picture quality. If the VTR is used over extremely long periods of time, these heads may become dirty and clogged. In such a case, the signals can no longer be recorded correctly, and the playback picture will be distorted accordingly. This is the case, for example, during the playback of a tape, the sound is reproduced normally, but no picture is seen, or the picture is greatly distorted. When such a symptom case occurs have the recorder checked by qualified service personnel.

If Dew Condensation Forms in the VTR

Condensation may form in the VTR if:

- The VTR is in a room where the heater has just been turned on.
- The VTR is in a room with steam or high humidity.
- The VTR is brought from cold surroundings into a well-heated room.
- The VTR is suddenly brought from cool surroundings, such as an air-conditioned room or car, to a place which is hot and humid.

Model NV-SD400A;

When dew forms in the VTR, the Dew Indicator "d" on the Display will flash on and off and all the function buttons are made non-operational to protect the tape and the video heads. When the Dew Indicator flashes, wait until this indicator disappears.

- If dew condensation forms inside the VTR while the POWER Switch is off, it will turn on automatically and the Dew Indicator will flash on and off. As soon as the dew condensation has been dissolved, the VTR will turn itself off again.

Model NV-SD400EA;

This model does not incorporate a dew sensor.

Do not operate the VTR for at least 1 hour if any of the above conditions occur.

Specifications

*Precautions
Specifications*

NV-SD400A/EA

Power Source:	240 V AC 50–60 Hz (NV-SD400A) 230 V AC 50–60 Hz (NV-SD400EA)
Power Consumption:	Approx. 19 watts
Video Recording System:	2 rotary heads, helical scanning system
Video Heads:	4 heads
Tape Speed:	SP; 23.39 mm/sec. LP; 11.7 mm/sec.
Tape Format:	VHS tape
Record/Playback Time:	SP; 240 min. with NV-E240 LP; 480 min. with NV-E240

VIDEO

Television System:	CCIR; 625 lines, 50 fields, PAL colour signal	
Modulation System:	Luminance; FM azimuth recording Colour signal; converted subcarrier phase shift recording	
Input Level:	VIDEO IN (PHONO);	1.0 Vp-p, 75 ohm, terminated
Output Level:	VIDEO OUT (PHONO);	1.0 Vp-p, 75 ohm, terminated
	RF Modulated; VHF channel 0 or 1 (NV-SD400A),	75 ohm
	VHF channel 2 or 3 (NV-SD400EA),	75 ohm

AUDIO

Input Level:	AUDIO IN (PHONO);	–10 dBV, more than 47 kohm
Output Level:	AUDIO OUT (PHONO);	–6 dBV, less than 1 kohm
Audio Track:	1 track (Normal-mono only)	
Video Horizontal Resolution:	Colour; more than 240 lines (SP)	
Signal-to-Noise Ratio:	Video; more than 43 dB (SP)	
	Audio; more than 43 dB	